

Z4272...84EDF L/R Z3660...72EDF L/R Z4272...84EPF L/R Z3660...72EPF L/R

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS
Screwdriver size #2




Rubber Mallet



Safety Glasses



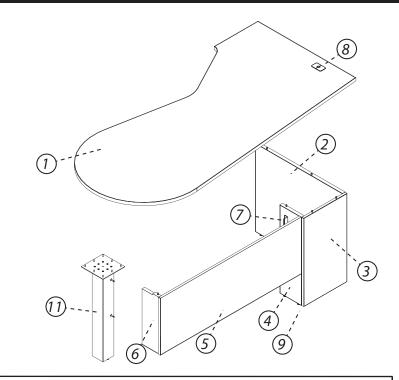

| ITEM | DESCRIPTION | | MATERIAL | | |
|------|-------------------------|----|----------|--|---------------|
| 1 | TOP | 1 | 1 | | PARTICLEBOARD |
| 2 | FAUX PED LARGE GABLE | 1 | 1 | | PARTICLEBOARD |
| 3 | FAUX PED SHORT GABLE | 1 | 1 | | PARTICLEBOARD |
| 4 | FAUX PED BACK | 1 | 1 | | PARTICLEBOARD |
| 5 | MODESTY PANEL | 1 | 1 | | PARTICLEBOARD |
| 6 | MODESTY SIDE | 1 | 1 | | PARTICLEBOARD |
| : 7 | ALUMINIUM CLEAT / COVER | 1 | 1 | | ALUMINIUM |
| 8 | GROMMET | 1 | 1 | | PLASTIC |
| 9 | LEVELER | 6 | 6 | | STEEL/PLASTIC |
| 10 | SCREWS/BOLTS | 34 | 34 | | STEEL |
| 11 | LEG | 1 | 1 | | STEEL |


 $Please\ contact\ Global\ Customer\ Care\ at\ 905-660-5101\ for\ any\ questions\ or\ concerns.$

STEPS


- A Remove Aluminium Cleat Cover.
- **B** Unscrew and remove leveler. Unscrew and remove Leg and aluminium cleat.
- **G** Untighten Blum Connectors.
- Untighten Minifix Connectors in Modesty panel.
- **©** Untighten Blum Connectors and released Faux ped.
- **6** Untighten Blum Connectors from Faux ped.
- **G** Unscrew Blum and Minifix bolts.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada ZDIS 17 Rev.00 Pg 1 of 3

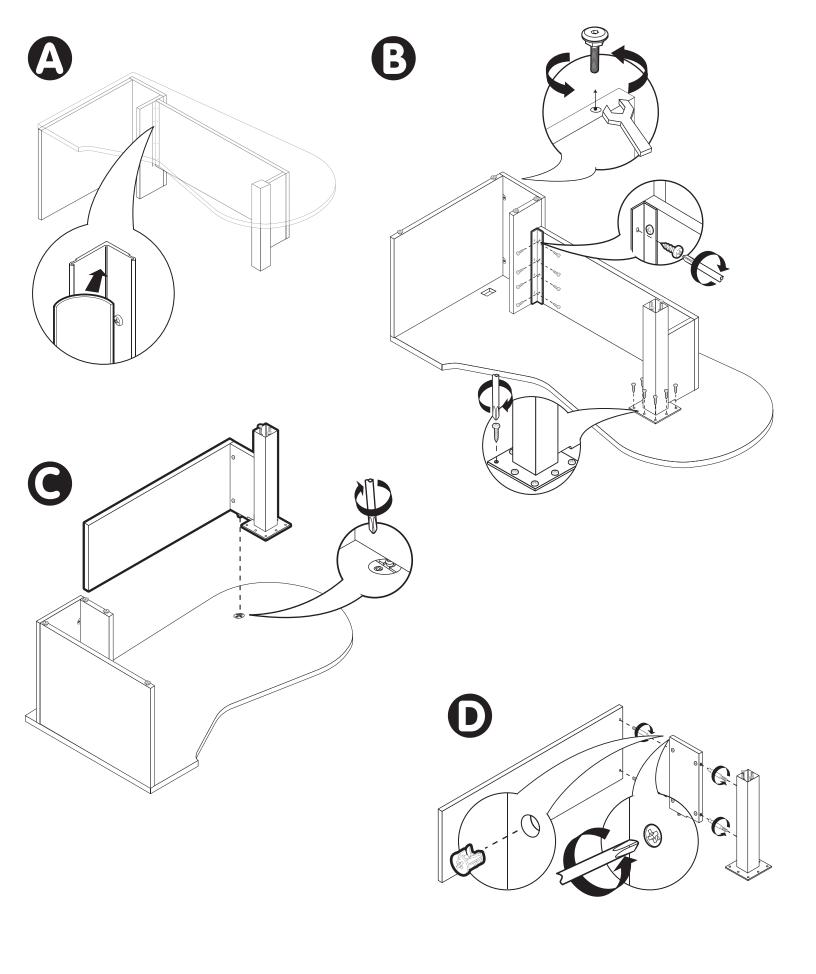

Printed in Canada ZDIS 17 Rev.00 Pg 2 of 3

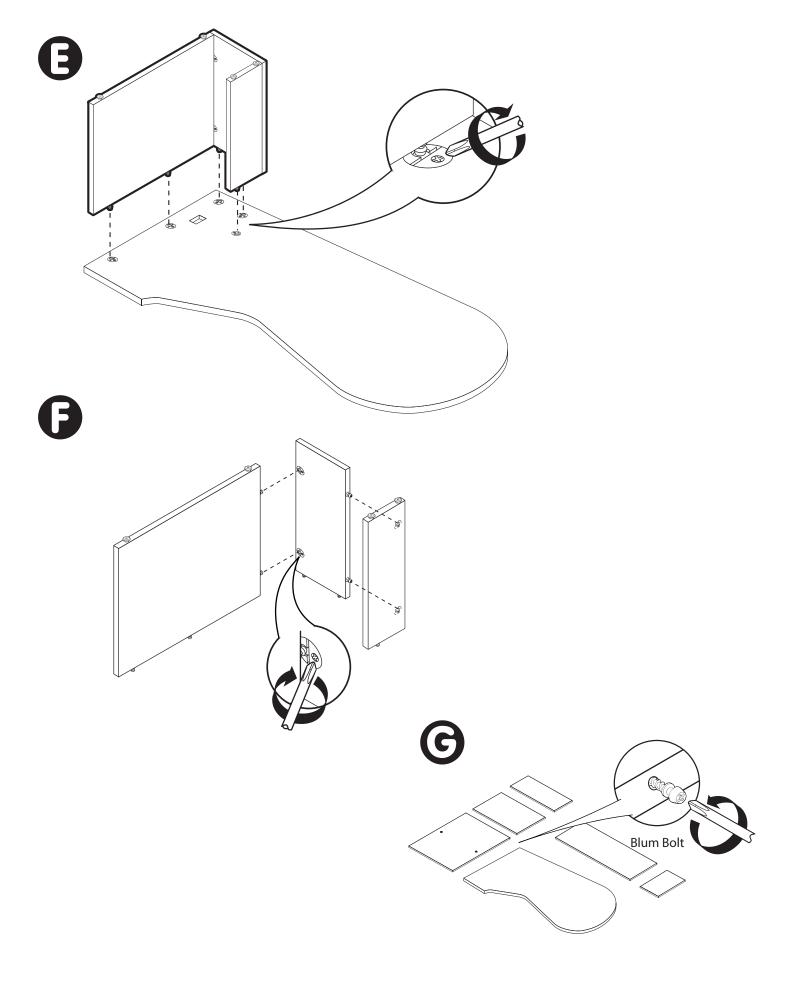

Printed in Canada ZDIS 17 Rev.00 Pg 3 of 3



Z4272...84EDT L/R Z3660...72EDT L/R

Z4272...84EPT L/R Z3660...72EPT L/R

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS Screwdriver size #2




 
Rubber Mallet



Safety Glasses



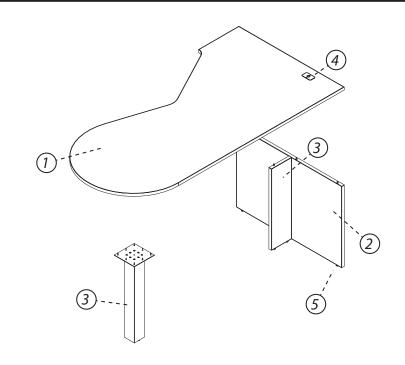



| ITEM | DESCRIPTION | | MATERIAL | | | | |
|------|--------------|--|----------|----|----|--|---------------|
| 1 | TOP | | 1 | 1 | 1 | | PARTICLEBOARD |
| 2 | GABLE | | 2 | 2 | 2 | | PARTICLEBOARD |
| 3 | "T" SUPPORT | | 1 | 1 | 1 | | PARTICLEBOARD |
| 4 | GROMMET | | 2 | 2 | 2 | | PLASTIC |
| 5 | LEVELER | | 4 | 4 | 4 | | STEEL/PLASTIC |
| 6 | SCREWS/BOLTS | | 18 | 18 | 18 | | STEEL |
| : 7 | LEG | | 6 | 6 | 6 | | STEEL |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.

STEPS


- Turn unit. Untighten Blum Connectors.
 Unscrew and remove leveler. Unscrew and remove Leg.

 B Untighten Blum Connector from support panel.


 - **G** Unscrew Blum bolts.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada Z-Dis 18 Rev.00 Pg 1 of 2

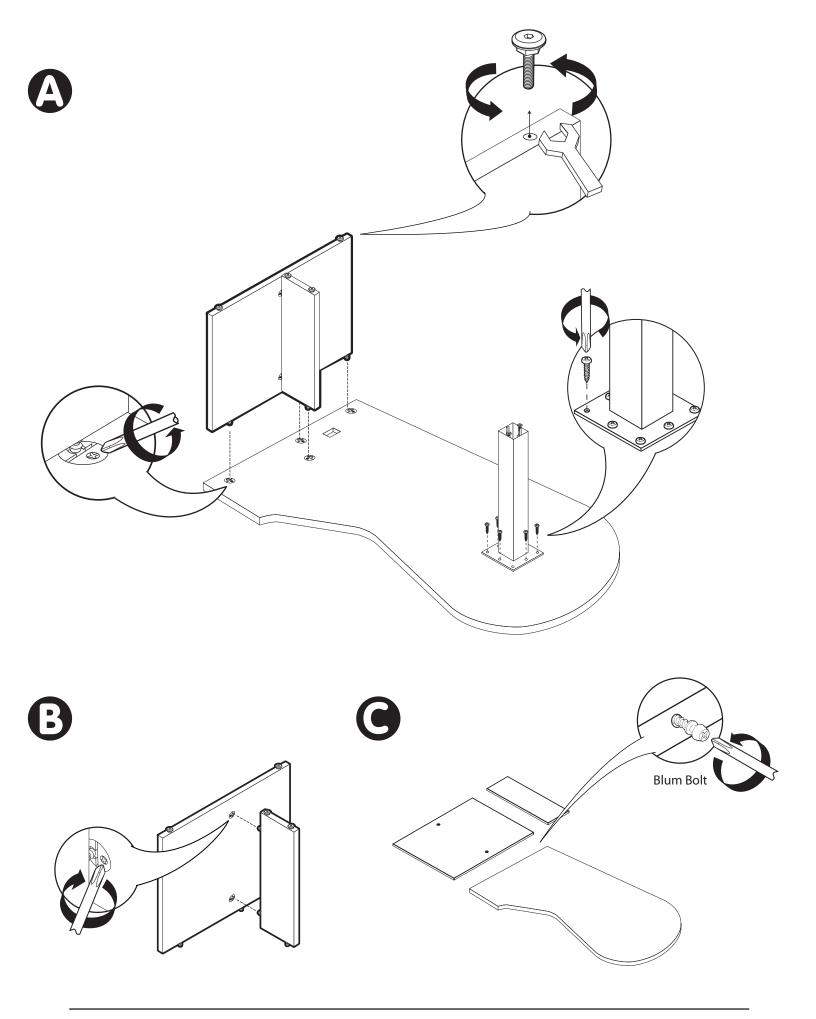

 Printed in Canada Z-Dis 18 Rev.00 Pg 2 of 2





Z4272...84EDR L/R Z4272...84EPR L/R Z3660...72EDR L/R Z3660...72EPR L/R





Z3660...72EDM L/R

Z3660...72EPM L/R

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS Screwdriver size #2




Rubber Mallet



Safety Glasses



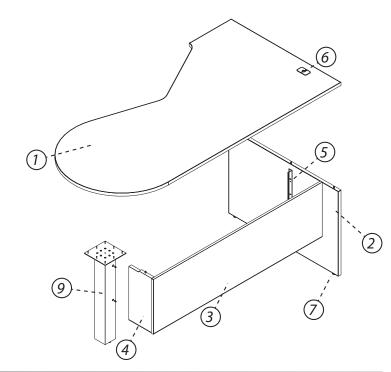




| ITEM | DESCRIPTION | | MATERIAL | | | | |
|------|-------------------------|----|----------|----|----|--|---------------|
| 1 | TOP | 1 | 1 | 1 | 1 | | PARTICLEBOARD |
| 2 | GABLE | 1 | 1 | 1 | 1 | | PARTICLEBOARD |
| 3 | MODESTY PANEL | 1 | 1 | 1 | 1 | | PARTICLEBOARD |
| 4 | MODESTY SIDE | 1 | 1 | 1 | 1 | | PARTICLEBOARD |
| 5 | ALUMINIUM CLEAT / COVER | 1 | 1 | 1 | 1 | | ALUMINIUM |
| 6 | GROMMET | 1 | 1 | 1 | 1 | | PLASTIC |
| : 7 | LEVELER | 4 | 4 | 4 | 4 | | STEEL/PLASTIC |
| 8 | SCREWS/BOLTS | 28 | 28 | 28 | 28 | | STEEL |
| 9 | LEG | 1 | 1 | 1 | 1 | | STEEL |
| | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.

STEPS

- A Remove Aluminium Cleat Cover.
- **3** Unscrew and remove leveler. Unscrew and remove aluminium cleat and Leg with modesties.
- **©** Untighten Blum Connectors.
- **O** Untighten Minifix Connectors in Modesty panel.
- **G** Unscrew Blum, and Minifix bolts.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

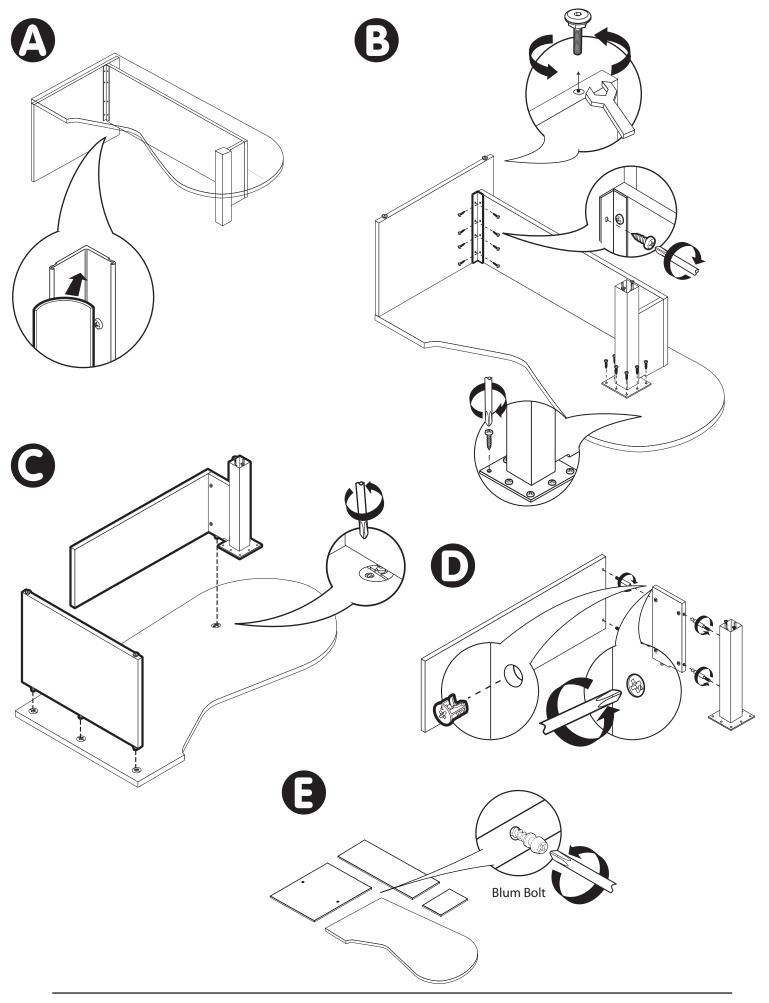

Printed in Canada ZDIS 19 Rev.00 Pg 2 of 2



Z2430...72T

Connectable Tables



Z3030...72 L/R Z2430...72 L/R

Z3030...72N Z2430...72N Z3030...72LK Z3030...72RK Z2430...72LK Z2430...72RK Z3030...72LN Z3030...72RN Z2430...72LN Z2430...72RN

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"




PHILLIPS
Screwdriver size #2

 


Rubber Mallet



Safety Glasses

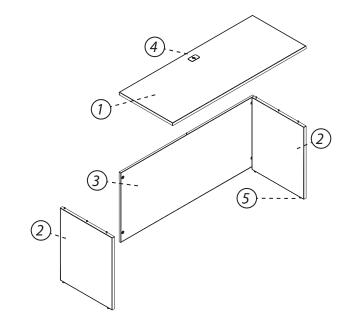



| ITEM | DESCRIPTION | | QUANTITIES | | | | | |
|------|--------------|----|------------|----|----|----|---------------|--|
| 1 | TOP | 1 | 1 | 1 | 1 | 1 | PARTICLEBOARD | |
| 2 | SIDE | 2 | 2 | 2 | 2 | 2 | PARTICLEBOARD | |
| 3 | BACK | 1 | 1 | 1 | 1 | 1 | PARTICLEBOARD | |
| 4 | GROMMET | 1 | 1 | 1 | 1 | 1 | PLASTIC | |
| 5 | LEVELER | 4 | 4 | 4 | 4 | 4 | STEEL/PLASTIC | |
| 6 | SCREWS/BOLTS | 10 | 17 | 16 | 17 | 16 | STEEL | |
| : | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.


STEPS

Turn unit. Untighten Blum Connectors. Unscrew and remove leveler.

B Unscrew Blum bolts.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada Z-Dis 20 Rev.00 Pg 1 of 2

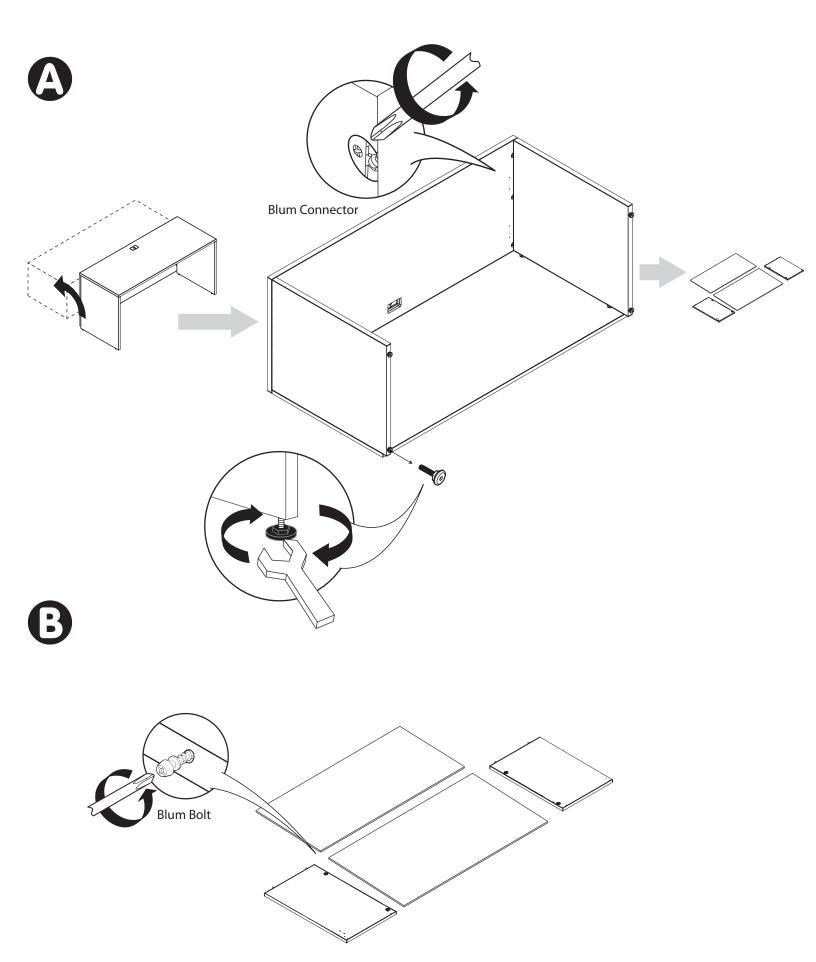

Printed in Canada Z-Dis 20 Rev.00 Pg 2 of 2







Z3672FI L/R Z3060...66FI L/R

Z3672FIC Z3060...66FIC

Z3660...72P L/R

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS
Screwdriver size #2




 
Rubber Mallet



Safety Glasses



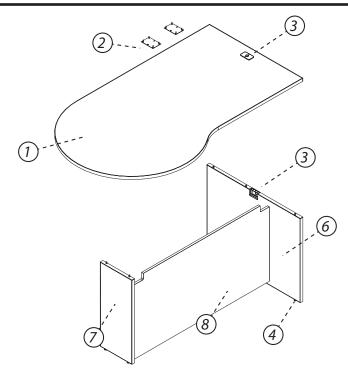



| ITEM | DESCRIPTION | | QUANTITIES | | | | |
|------|---------------|----|------------|----|--|---|---------------|
| 1 | TOP | 1 | 1 | 1 | | | PARTICLEBOARD |
| 2 | BRACKET/PLATE | 2 | 2 | 2 | | | STEEL |
| 3 | GROMMET | 2 | 2 | 2 | | | PLASTIC |
| 4 | LEVELER | 4 | 4 | 4 | | | STEEL/PLASTIC |
| 5 | SCREWS/BOLTS | 17 | 17 | 17 | | | STEEL |
| 6 | GABLE WIDE | 1 | 1 | 1 | | | PARTICLEBOARD |
| : 7 | GABLE NARROW | 1 | 1 | 1 | | | PARTICLEBOARD |
| 8 | BACK | 1 | 1 | 1 | | | PARTICLEBOARD |
| | | | | | | | |
| | | | | | | · | · |
| | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.

STEPS

① Unscrew and remove brackets/plate.


(B) Unscrew and remove Leg and Leveler. Untighten Blum Connectors.

© Unscrew Blum bolts.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada Z-Dis 21 Rev.00 Pg 1 of 2

rev. 00

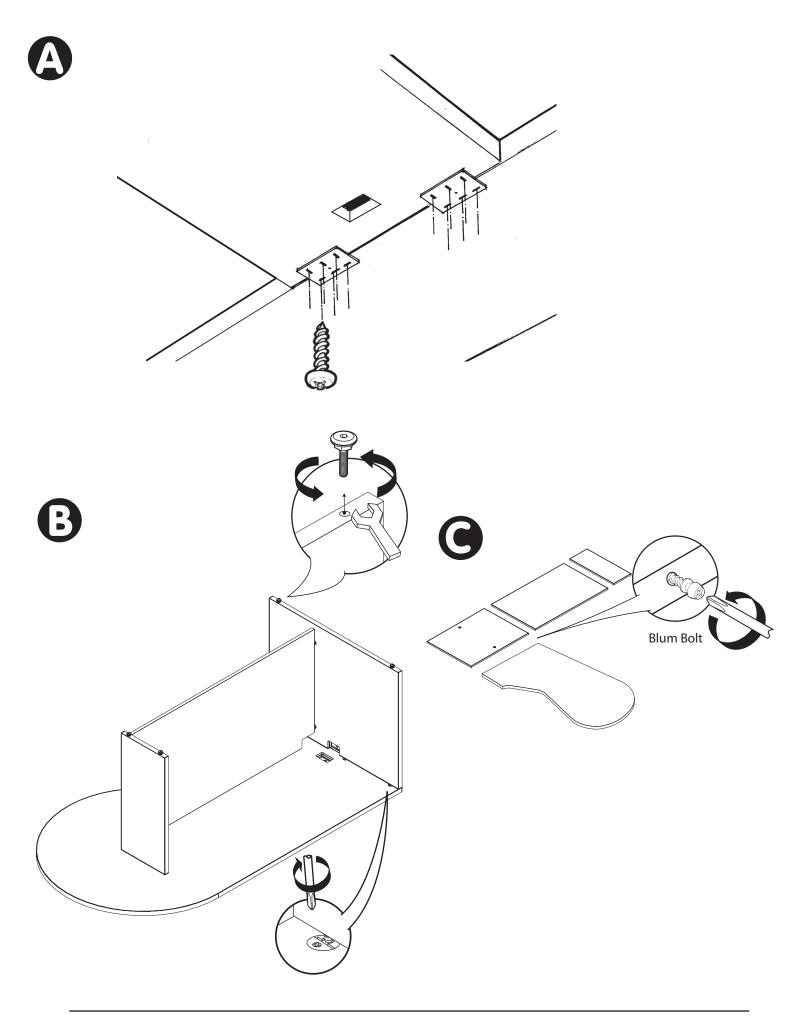

Printed in Canada Z-Dis 21 Rev.00 Pg 2 of 2





Z3672FI Z3060...72FI Z2448...66FI Z3660...72FP L/R

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS
Screwdriver size #2




Rubber Mallet



Safety Glasses



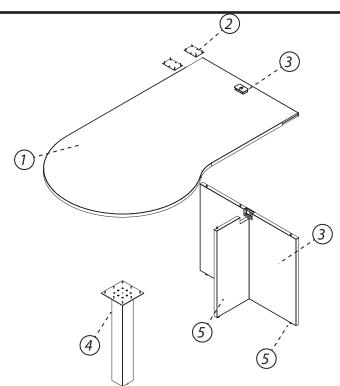

| ٦ | U |
|---|---|

| ITEM | DESCRIPTION | | QUANTITIES | | | | |
|------|------------------|----|------------|---|--|---|---------------|
| 1 | TOP | 1 | 1 | | | | PARTICLEBOARD |
| 2 | BRACKET/PLATE | 2 | 2 | | | | STEEL |
| 3 | GROMMET | 2 | 2 | | | | PLASTIC |
| 4 | LEG | 1 | 1 | | | | STEEL |
| 5 | LEVELER | 2 | 2 | | | | STEEL/PLASTIC |
| 6 | SCREWS/BOLTS | 26 | 26 | | | | STEEL |
| : 7 | "T" BASE PANEL 1 | 1 | 1 | | | | PARTICLEBOARD |
| 8 | "T" BASE PANEL 2 | 1 | 1 | | | | PARTICLEBOARD |
| | | | | | | | |
| | | · | · | · | | · | |
| | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.


STEPS

- **1** Unscrew and remove brackets/plate.
- **(B)** Unscrew and remove Leg and Leveler. Untighten Blum Connectors.
- **©** Unscrew Blum bolts.


NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada Z-Dis 22 Rev.00 Pg 1 of 2




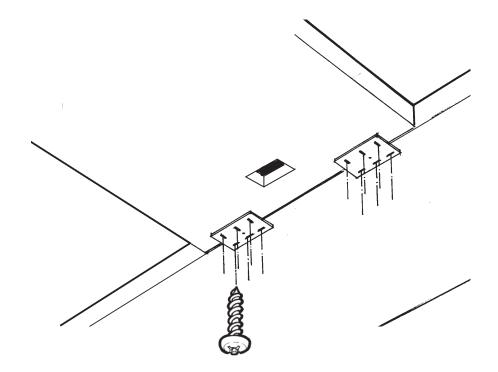



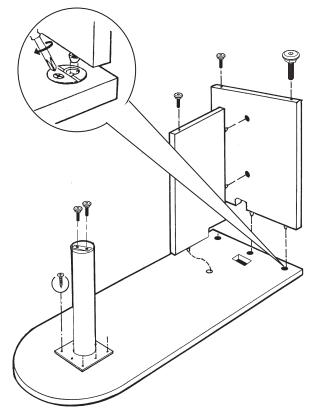



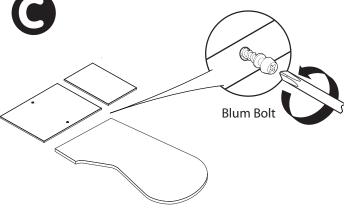

Printed in Canada Z-Dis 22 Rev.00 Pg 2 of 2





Z3672I

Z3060...66l

Z2448...66l



Z3660...72IP L/R

T

Z62RS

Z50RS Z42RS Z60RS Z48RS

Z40RS


Disassembly Instructions





Safety Glasses



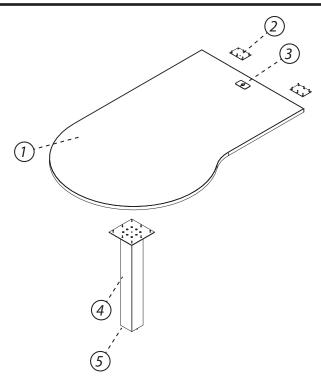

| ITEM | DESCRIPTION | | QUANTITIES | | | | |
|------|---------------|----|------------|----|--|--|---------------|
| 1 | TOP | 1 | 1 | 1 | | | PARTICLEBOARD |
| 2 | BRACKET/PLATE | 2 | 2 | 2 | | | STEEL |
| 3 | GROMMET | 1 | 1 | 1 | | | PLASTIC |
| 4 | LEG | 1 | 1 | 1 | | | STEEL |
| 5 | LEVELER | 2 | 2 | 2 | | | STEEL/PLASTIC |
| 6 | SCREWS/BOLTS | 24 | 24 | 24 | | | STEEL |
| : | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

Please contact Global Customer Care at 905-660-5101 for any questions or concerns.

STEPS

(A) Unscrew and remove brackets/plate.


B Unscrew and remove Leg and Leveler.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.


Printed in Canada Z-Dis 23 Rev.00 Pg 1 of 2

rev: 00



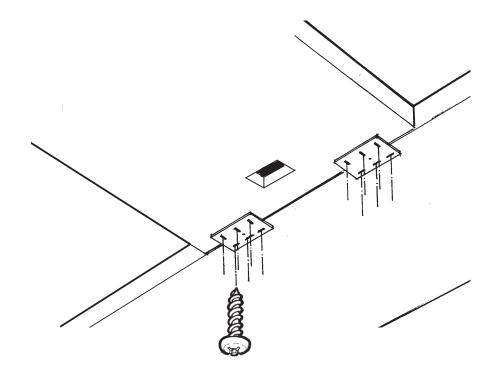



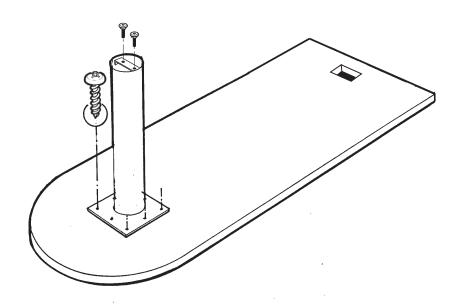

Printed in Canada Z-Dis 23 Rev.00 Pg 2 of 2