

4H STORAGE

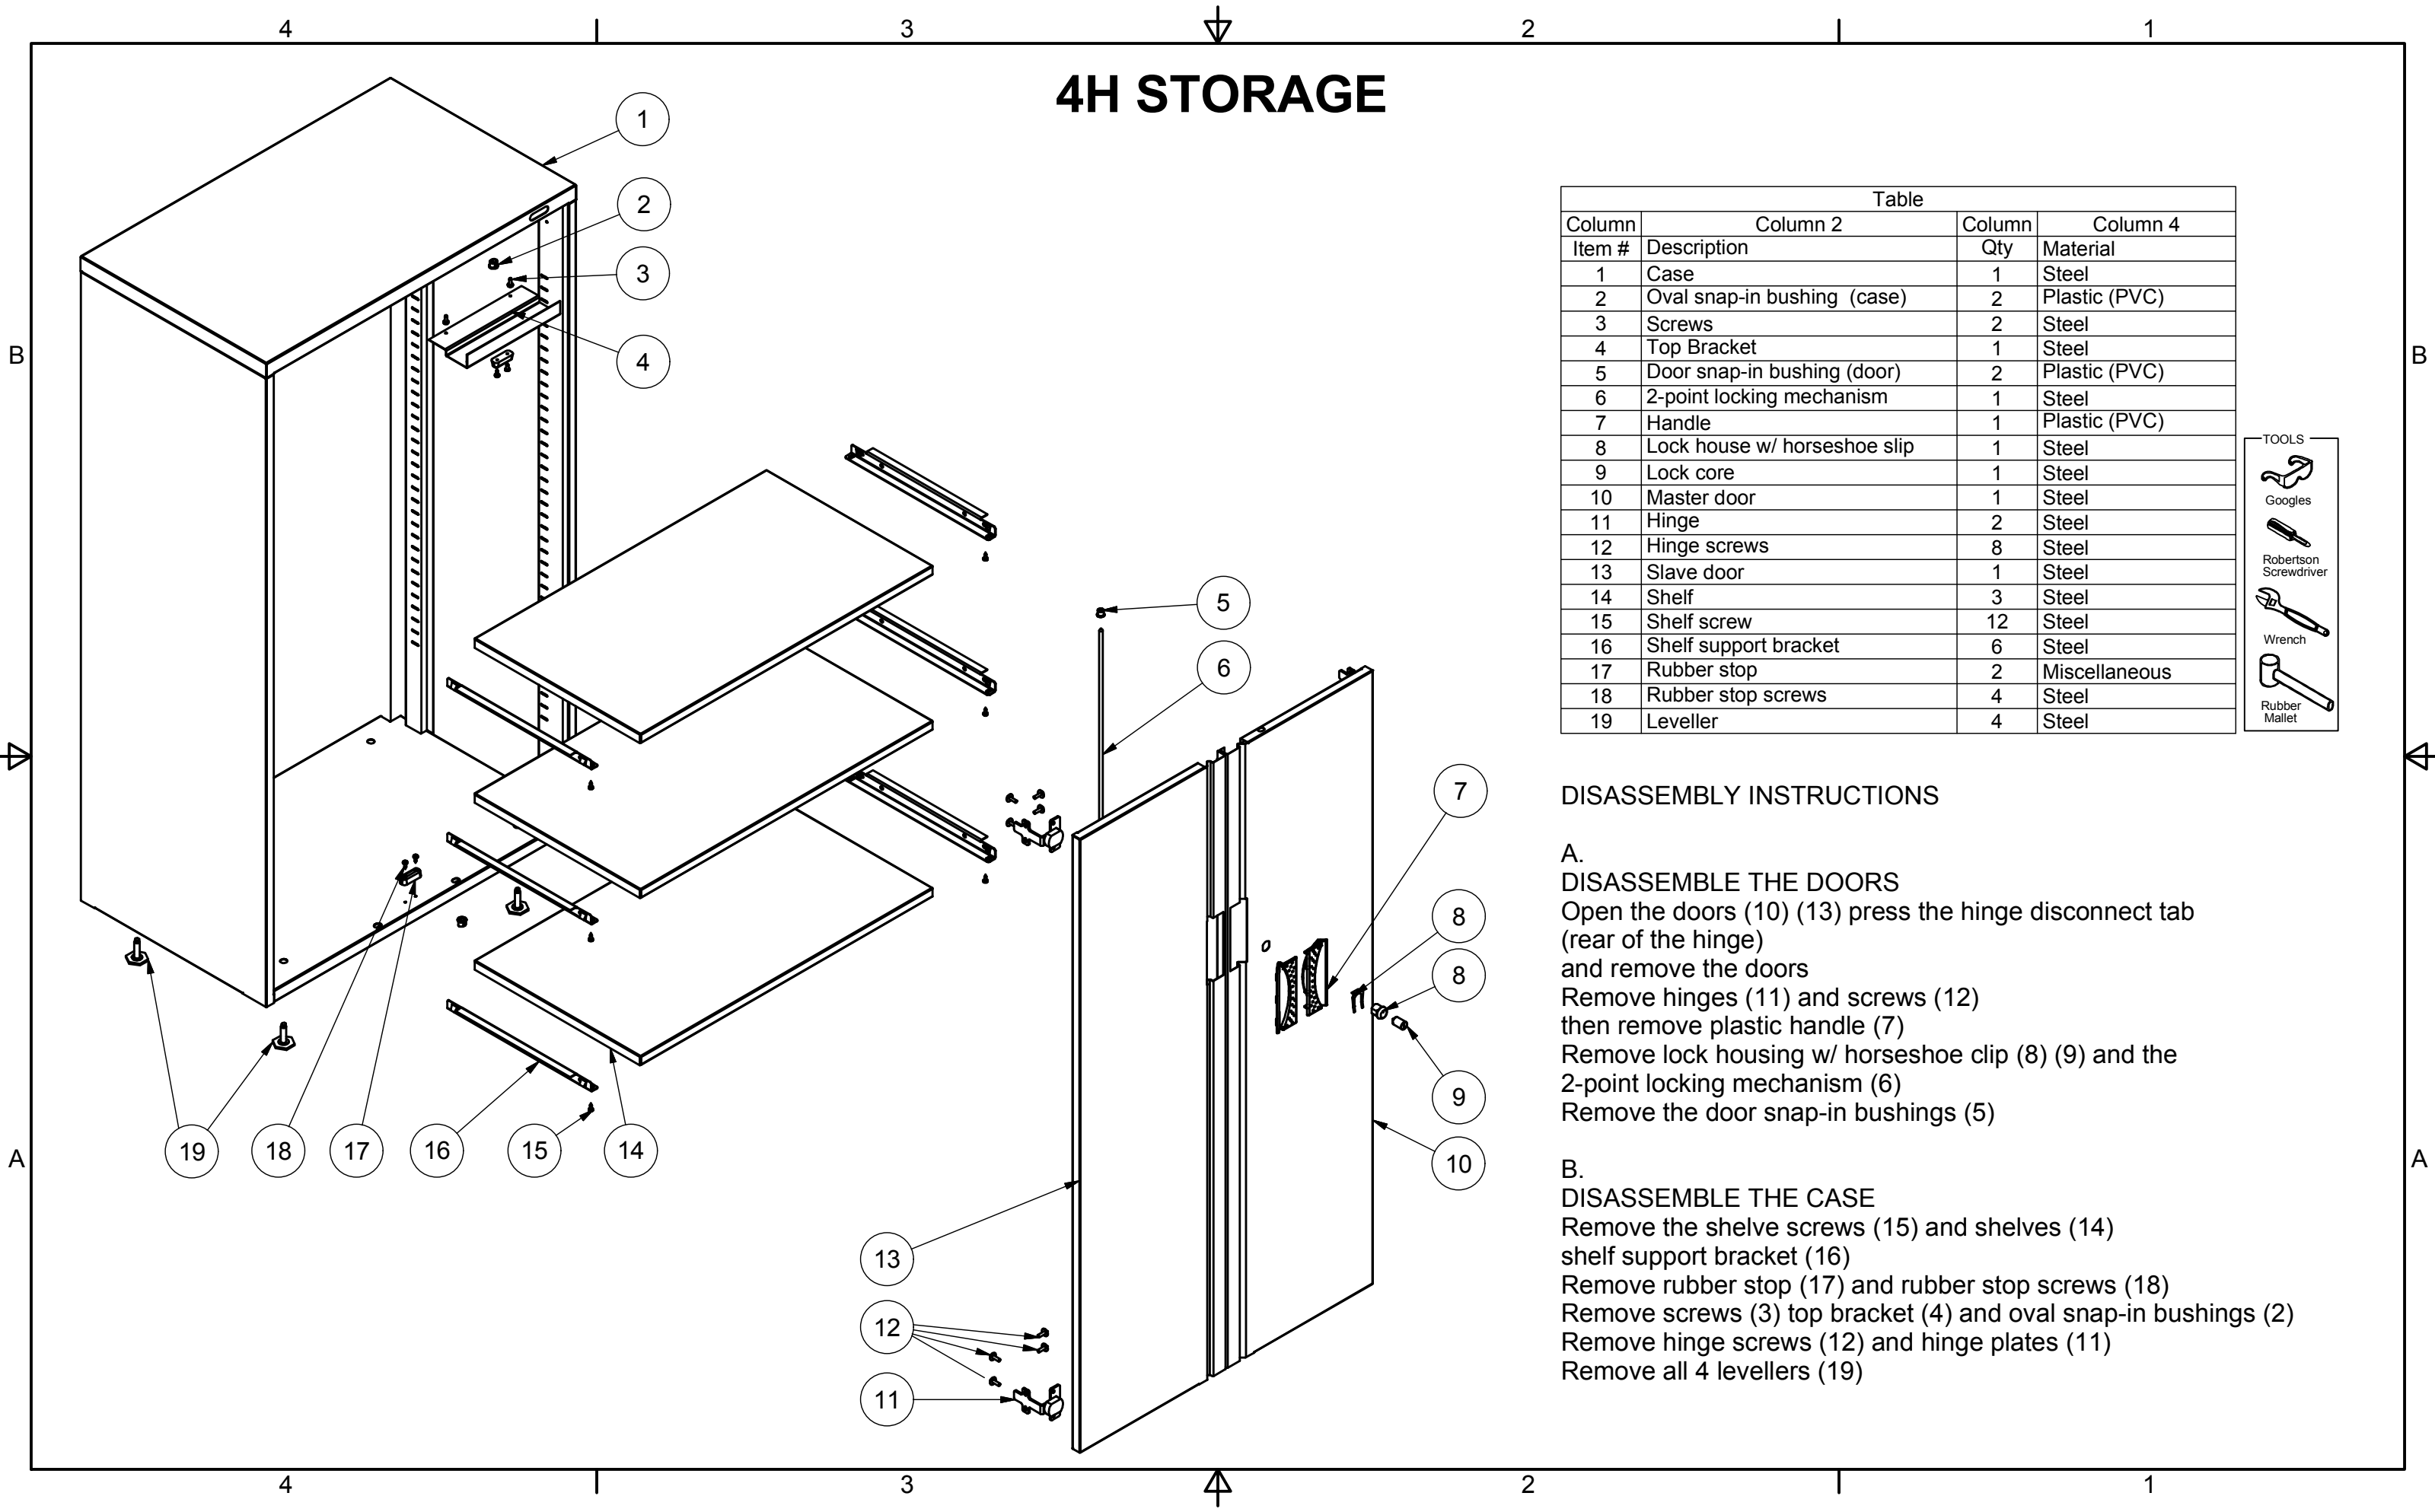


Table			
Column	Column 2	Column	Column 4
Item #	Description	Qty	Material
1	Case	1	Steel
2	Oval snap-in bushing (case)	2	Plastic (PVC)
3	Screws	2	Steel
4	Top Bracket	1	Steel
5	Door snap-in bushing (door)	2	Plastic (PVC)
6	2-point locking mechanism	1	Steel
7	Handle	1	Plastic (PVC)
8	Lock house w/ horseshoe slip	1	Steel
9	Lock core	1	Steel
10	Master door	1	Steel
11	Hinge	2	Steel
12	Hinge screws	8	Steel
13	Slave door	1	Steel
14	Shelf	3	Steel
15	Shelf screw	12	Steel
16	Shelf support bracket	6	Steel
17	Rubber stop	2	Miscellaneous
18	Rubber stop screws	4	Steel
19	Leveller	4	Steel

- TOOLS
- Goggles
 - Robertson Screwdriver
 - Wrench
 - Rubber Mallet

DISASSEMBLY INSTRUCTIONS

- A.**
DISASSEMBLE THE DOORS
 Open the doors (10) (13) press the hinge disconnect tab (rear of the hinge) and remove the doors
 Remove hinges (11) and screws (12) then remove plastic handle (7)
 Remove lock housing w/ horseshoe clip (8) (9) and the 2-point locking mechanism (6)
 Remove the door snap-in bushings (5)
- B.**
DISASSEMBLE THE CASE
 Remove the shelf screws (15) and shelves (14) shelf support bracket (16)
 Remove rubber stop (17) and rubber stop screws (18)
 Remove screws (3) top bracket (4) and oval snap-in bushings (2)
 Remove hinge screws (12) and hinge plates (11)
 Remove all 4 levellers (19)