

## Description1Vertical case2Lock house + horseshoe clip3Lock core4Follower block5Inner front panel6Slide7Drawer body, Flush8Plastic card holder9Card

2

## DISASSEMBLY INSTRUCTIONS

## Α.

DISASSEMBLE THE DRAWERS Open the drawers (7) extend the slides (6) fully, tilt towards centre and lift These may need to be tapped with a hammer to release. Remove inner panel (5) follower block (4) and plastic card holder and cardboard card (8) (9) from each drawer

## В

DISASSEMBLE THE CASE Remove the lock house and horseshue clip (2) (3)

		TOOLS -
		2
Qty	Material	Googles
1	Steel	
1	Steel	
1	Steel	Robertson Screwdriver
1	Steel	S.
1	Steel	
Pair	Steel	Wrench
5	Steel	IA
5	Plastic (PVC)	Rubber
5	Cardboard	Mallet

1

1

K-

В