A. Unscrew the two screws (4) from the back rail of the chair frame (1). Push out the Back cushion (3) from the bottom edge to detach from the frame.

back cushion.
Using a flat screw driver, pry out the four nail glides
(5) from under the legs of the chair frame.

- B. Unscrew the four screws (4) that attach the seat cushion to the chair frame (1).
- Unscrew the two screws (1) from the top edge of the back cushion.

 C. Strip off the fabric and foam from the plywood of the Seat and Back cushions using a utility knife.

GENERIC DISASSEMBLY INSTRUCTIONS FOR GUEST CHAIRS

Product designed for disassembly in a reasonable time frame (5 minutes or less)

1.	Wooden Frame	4	Wood
2.	Seat Cushion	1	Fabric / foam / plywood

QTY MATERIAL

Back Cushion
 Fabric / foam / plywood
 Screws
 Steel
 Nail Glides
 Plastic (PP)** / Steel

NOTE:

(PP)** -- POLYPROPYLENE

ITEM # DESCRIPTION

REQUIRED TOOLS









Safety glasses Philips screwdriver Utility knife Flat screwdriver

IMPORTANT

Please exercise caution when disassembling your chair for recycling. Please ensure that you have the correct tools for disassembly. Tools can be sharp and some components are heavy. Orient tools away from the body in case sudden slippage occurs. Global accepts no responsibility for any damage, accident or injury that may occur during disassembly.



GLOBAL UPHOLSTERY CO. INC.

560 SUPERTEST RD.DOWNSVIEW, ONT. M3J 2M6. CANADA TEL. (416) 661-3660 FAX. (416) 6614300

Sheet _1_ Of _1