




FTDHNBT HANDSET DISPLAY INSTRUCTIONS



This manual is a quick guide of the functionality for the FTDHNBT Handset Display. This handset is intended to be used with FreeFit height adjustable tables.

Key

- Parallel up
- Parallel down
- Store Memory
- Memory 1
- Memory 2
- Memory 3

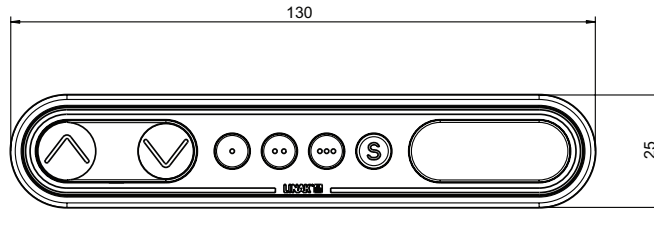

Up and Down ()

Press either the up or down button for parallel drive until the button is released again or the system reaches end position.

Memory

The four small buttons are used for memory drive/storing memory.

Store Memory

- Press **S** button. Display will flash for 2 seconds.
- Within these two seconds, press one of the small buttons with dots and the position will be stored at this button.
- The panel will acknowledge by showing "1", "2" or "3" in the display depending on chosen position.

Memory Drive (small buttons with dots)

Press one of the memory buttons and the system will start driving to the pre-programmed memory position.

Display Function

Shows the actual height in either cm or inch.