









Extended Corners

Disassembly Instructions

TOOLS REQUIRED



WRENCH Size #16 or 5/8"



PHILLIPS Screwdriver size #2





Rubber Mallet



Safety Glasses



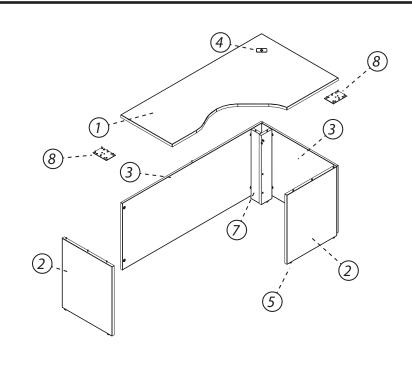



ITEM	DESCRIPTION	QUANTITIES					MATERIAL
1	TOP	1	1	1	1	1	PARTICLEBOARD
2	SIDE	2	2	2	2	2	PARTICLEBOARD
3	BACK	1	1	1	1	1	PARTICLEBOARD
4	GROMMET	1	1	1	1	1	PLASTIC
5	LEVELER	4	4	4	4	4	STEEL/PLASTIC
6	SCREWS/BOLTS	19	26	26	25	25	STEEL
7	POST PANEL	2	2	2	2	2	PARTICLEBOARD
8	BRACKET/PLATE		1	1	1	1	STEEL


Please contact Global Customer Care at 905-660-5101 for any questions or concerns.


STEPS

- Turn unit. Untighten Blum Connectors. Unscrew and remove leveler.
- **B** Unscrew Blum bolts.
- Remove screws from Post panel.

NOTE: Any alterations to listed components will void the manufacturer's warranty. The manufacturer will not be responsible for any damage or bodily harm caused by alterations in accordance with national or local electrical codes and manufacturer's specifications. In accordance with the manufacturer's policy of continual product improvement, the product presented in this document is subject to change without notice or obligation.

Printed in Canada Z-Dis 16 Rev.00 Pg 1 of 2

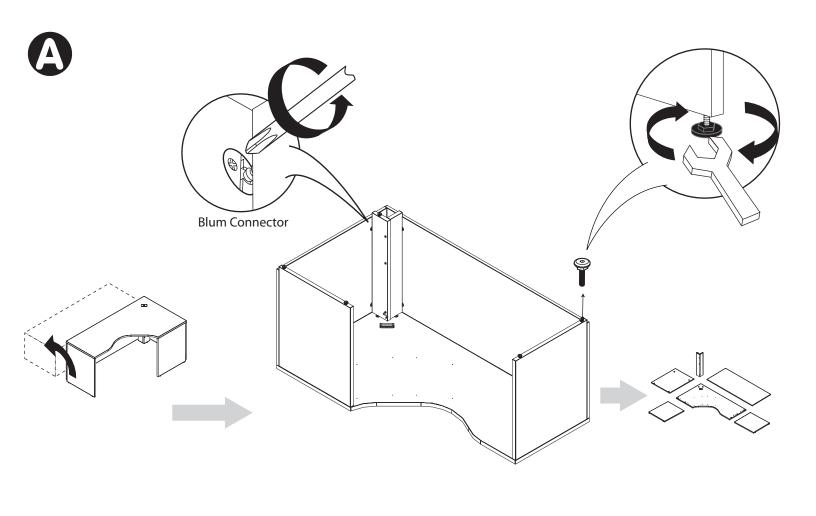

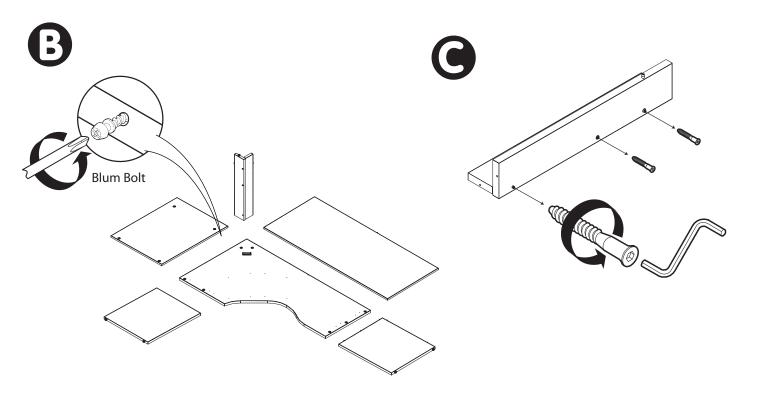

Printed in Canada Z-Dis 16 Rev.00 Pg 2 of 2