


DISASSEMBLY INSTRUCTIONS: "CITI" MODEL # 7875

Product designed for disassembly in a reasonable time frame (5 minutes or less)

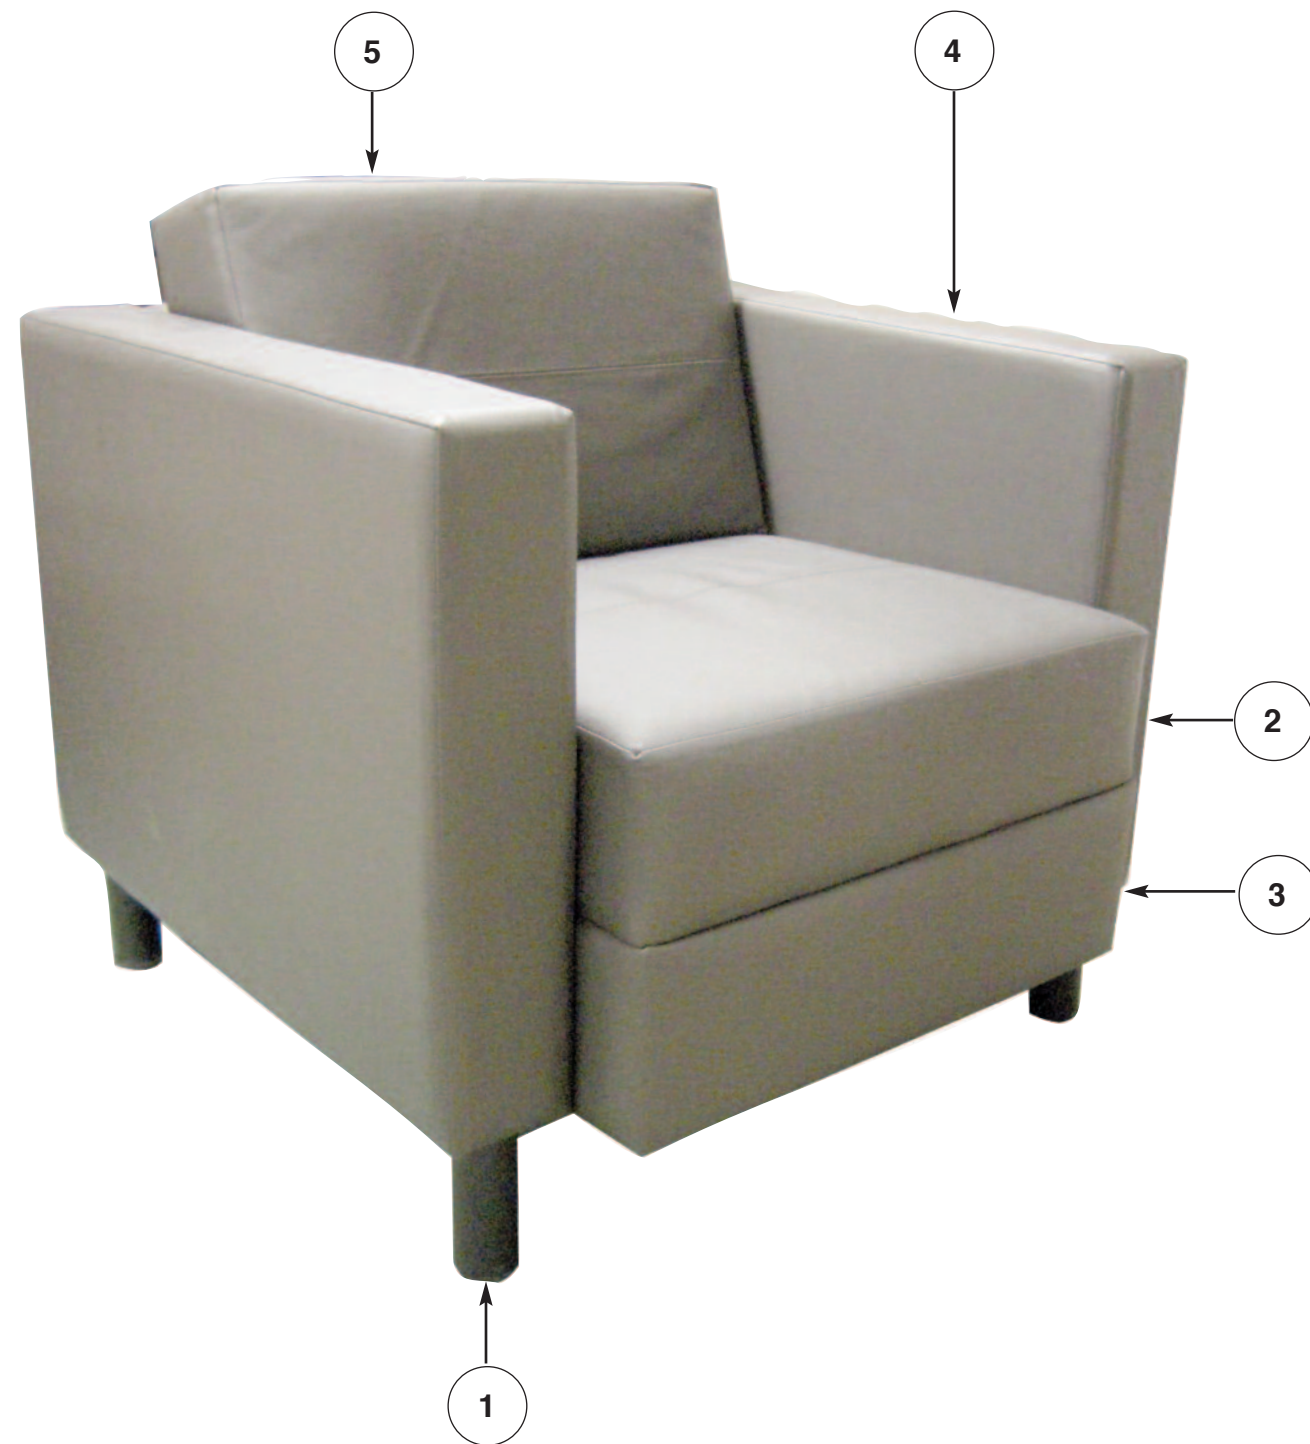

ITEM #	DESCRIPTION	QTY	MATERIAL
1.	Tubular metal legs	4	Steel
2.	Seat Cushion	1	Fabric / foam / plywood
3.	Seat Frame	1	Fabric / foam / plywood
4.	Arm assembly	Pr	Fabric / foam / plywood
5.	Back assembly	1	Fabric / foam / plywood

REQUIRED TOOLS



IMPORTANT
Please exercise caution when disassembling your chair for recycling. Please ensure that you have the correct tools for disassembly. Tools can be sharp and some components are heavy. Orient tools away from the body in case sudden slippage occurs. Global accepts no responsibility for any damage, accident or injury that may occur during disassembly.




GLOBAL UPHOLSTERY CO. INC.
560 SUPERTEST RD. DOWNSVIEW, ONT.
M3J 2M6, CANADA
TEL. (416) 661-3660
FAX. (416) 661-4300




A. Turn the chair on its side and unscrew the four legs (1).




B. Using a flat head screwdriver pry out staples and remove the black lining to reveal chair framework

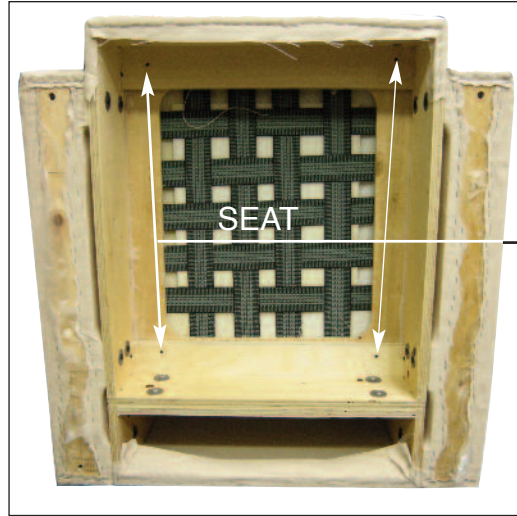



C. Using a Philips screwdriver, unscrew the four wood screws to detach the Upholstered Seat Cushion. (2)

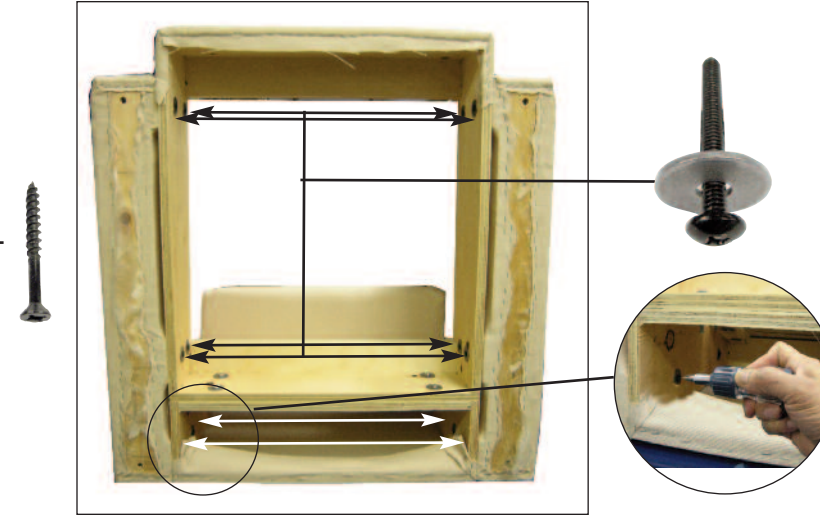

D. Using a Philips screwdriver, unscrew the eight screws and washers to detach the Arms (4) from the seat/back frame
Use a snub nose Philips screwdriver to unscrew the four screws and washers indicated by white arrows

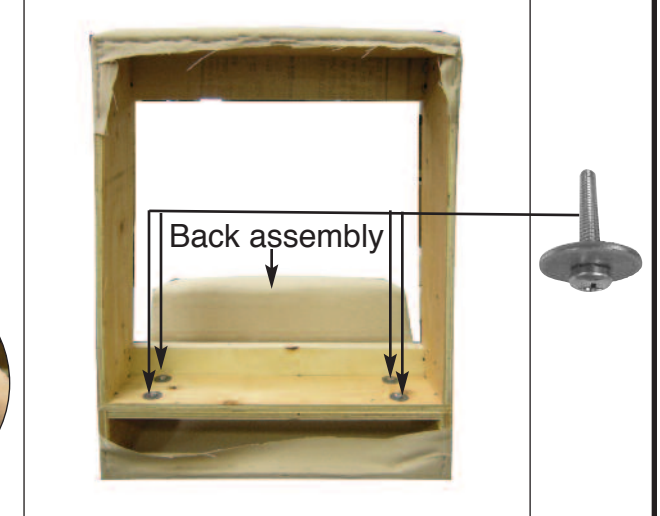

E. Using a Philips screwdriver, unscrew the four screws with washers, to detach the back assembly from the Seat frame (3)

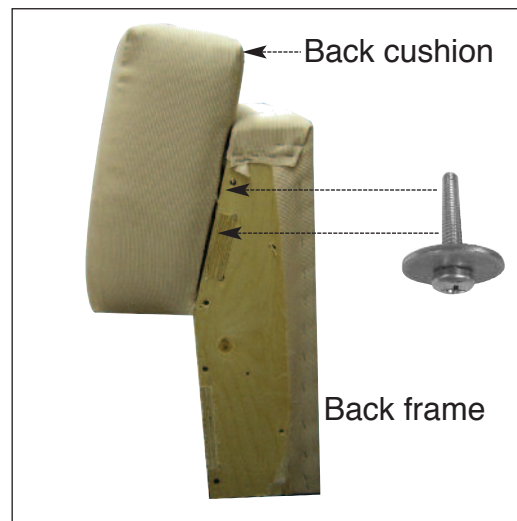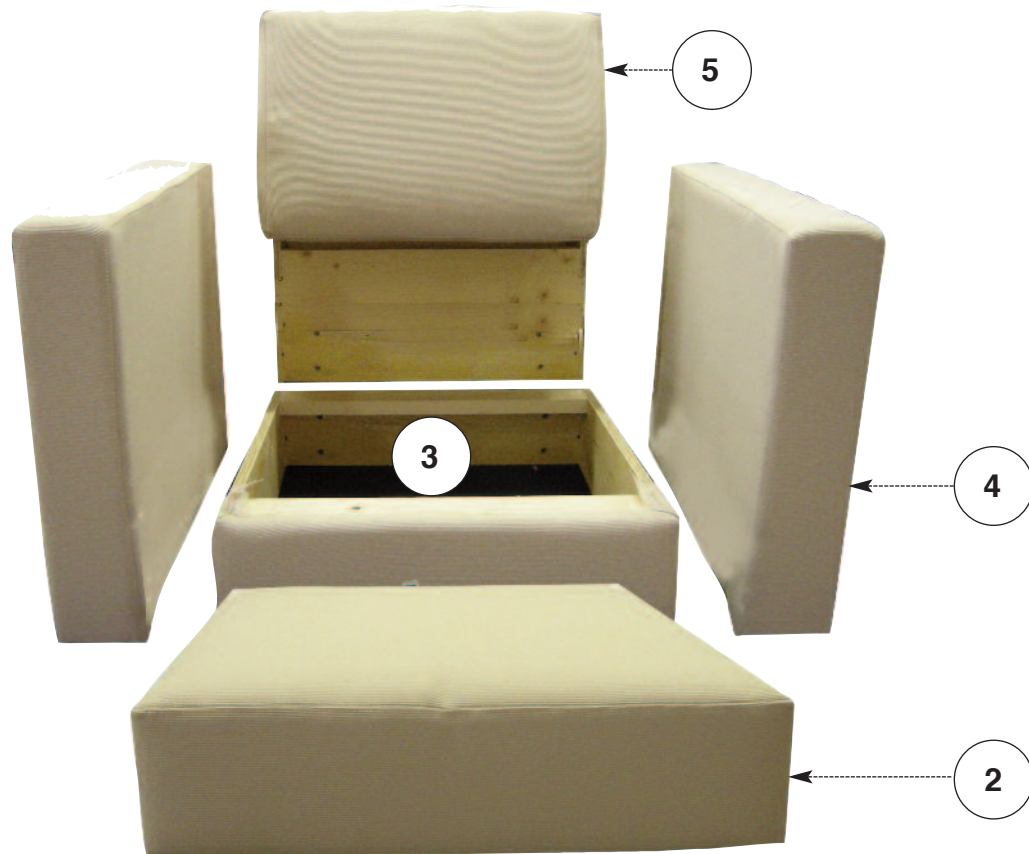

F. Strip off the fabric from the Back frame. Using a Philips screw driver, unscrew the four screws and washers to detach the Back cushion from the Back frame.

STRIP OFF FABRIC FROM ALL THE DISASSEMBLED PARTS. STRIP OFF THE FOAM FROM THE PLYWOOD PARTS USING A UTILITY KNIFE.

IMPORTANT

Please exercise caution when disassembling your chair for recycling. Please ensure that you have the correct tools for disassembly. Tools can be sharp and some components are heavy. Orient tools away from the body in case sudden slippage occurs. Global accepts no responsibility for any damage, accident or injury that may occur during disassembly.



GLOBAL UPHOLSTERY CO. INC.
560 SUPERTEST RD. DOWNSVIEW, ONT.
M3J 2M6, CANADA
TEL. (416) 661-3660
FAX. (416) 661-4300